

Installation instructions

Triflex Piston Dosing Pump



Triflex Piston Dosing Pump

Unfasten the tension spring:

Unfasten the tension spring from the upper part of the cylinder.



Retaining bolt:

The retaining bolt must be removed from the cylinder and kept safe.



Installation:

The Triflex Piston Dosing Pump is installed on the wooden frame, in the holes provided.

Important notice:

Three wood screws are required for fastening.



4

Fasten the cylinder:

The cylinder is fastened to the mount by inserting the retaining bolt through the opening. The tension spring is then pushed down again.



5

Tighten the screws:

The lower part of the cylinder is also fastened to the mount. The supplied screws must be fastened finger-tight with a size 10 ring wrench so that the cylinder can still be moved. Then, connect the suction hose to the inlet valve with the flat end.



Triflex Piston Dosing Pump:

When the lever is pushed down, around 110 ml of catalyst are conveyed from the 16.67 l canister and directly into the container.



International

Triflex GmbH & Co. KG
Karlstrasse 59
32423 Minden | Germany
Fon +49 571 38780-708
international@triflex.com
www.triflex.com

